

Quality Marine, Inc. VMI Series 200 Constant Voltage Battery Charger

Addendum

Please include these changes to page 10 of the Owners Manual.


Equalize Timer DIP Switch Settings

The Float / Equalize function is controlled by a yellow pushbutton switch located on the front panel above the AC Circuit Breaker. The button is illuminated when the charger is in Equalize mode and off when in Float mode.

When in Float mode, pressing the button once will cause it to illuminate and places the charger in Equalize mode. The charger will remain in Equalize mode for the duration of the timer setting at which time it will automatically switch back to Float mode and extinguish the indicator lamp. Equalize mode may be cancelled at any time during the cycle by pressing the Float / Equalize button a second time.

The timer duration is adjustable from 4 ½ - 139 ½ hours in 4 ½ hour steps. The adjustment for timer duration is located inside the charger next to the voltage controls. *See Section 6, Operation and Initial Settings and fig. 7-1.* The switch settings may be combined in any order to produce a combination of the values (they are additive).

The Equalize mode may be disabled by setting all switches to open (off).

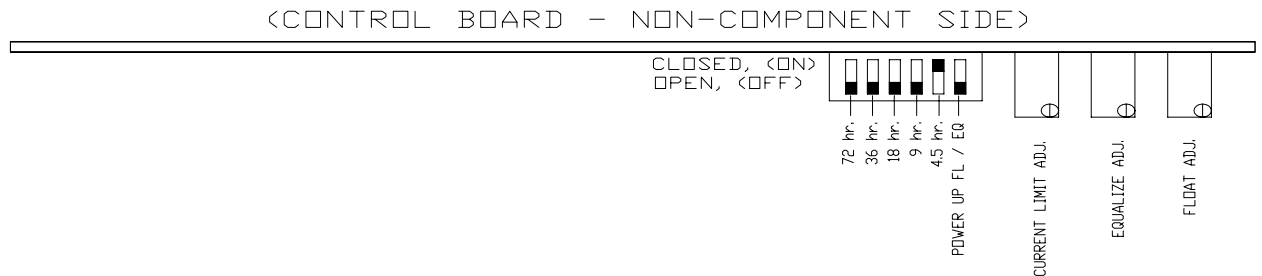

Float & Equalize Voltage Adjustment Procedures:

The Voltage Minimum Adjustment Pot has been eliminated. (See illustration above)